

INSTRUCTIONS


Sconce "Spider" 5 still arms

1. Unpack without using any cutter or scissor because of possible scratches. Release the packaging of reflectors without removing it completely.



2. Locate the positioning of the round plate to the wall, respecting the position you want for the lamp.

3. Screw the screws into the thread to remove the plate of the lamp.

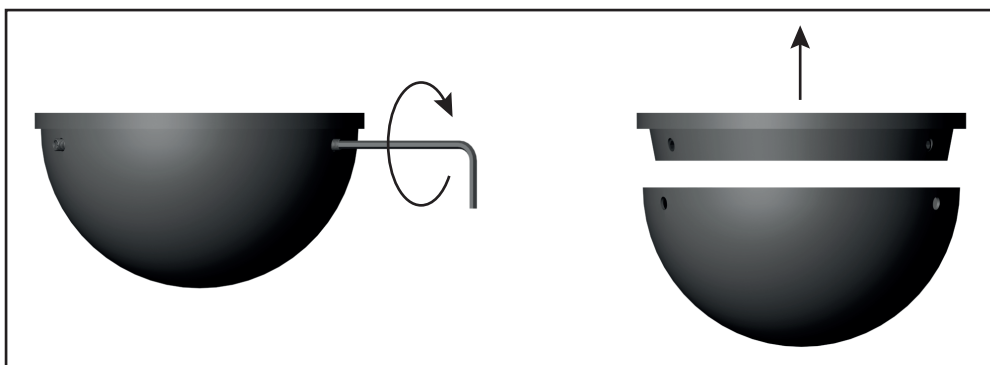

4. Screw the arms to the half-sphere. Screw strongly the nuts in the half-sphere to avoid unscrewing.

5. Connect electrical wires.

6. Fix the round plate to the wall.

7. At this stage, at least 2 operators are necessary. One maintains the lamp, second operator connects electrical wires, then match the holes of the half-sphere in front of the screws (only one position is possible). Then unscrew 2mm of the screws.

8. Remove completely the packaging.